




11. Mounting antivibration feet (optional) ▾

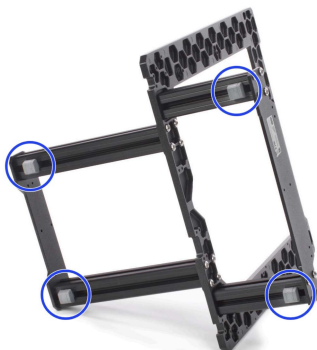

ⓘ Note this step is optional for now. **We recommend mounting the feet now to protect the surface on your table** (workbench). However, you need to lift the frame up before each turn.

ⓘ There will be extra step at the end of the assembly to remind you of the antivibration feet.

■ **For this step, please prepare:**

■ Antivibration foot (4x)

■ Turn the YZ frame on the side and insert the antivibration foot. Insert and turn 90 degrees to lock it in place.

■ Repeat this process on all 4 feet. Place them 2-3 cm from the end of each extrusion.



Next →

